

Adaptable. Accessible. Flexible.

# NexPak™

Automated Medication Packaging For Multiple Care Settings & Elevated Patient Outcomes




(360 canister unit shown)



## Patient Satisfaction

Convenient strip packaging simplifies nurse-patient interaction and ensures accuracy.

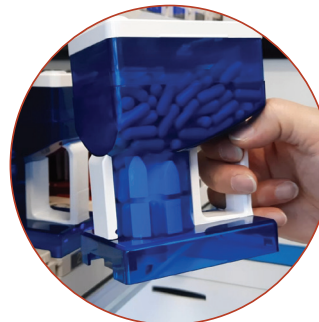

## Intuitive Engineering

Smart Medication Canisters make it easy to manage replenishments.



## Flexible Packaging

Switching from multi-to unit dose for different applications is simple with a swappable lower packaging unit and quick paper exchange.


## Your Direct Path to Automated Packaging

NexPak is from the medication management partner you trust, Capsa Healthcare. NexPak is so simple to integrate, and it allows your pharmacy to expand into new markets quickly. NexPak gives you everything to adapt strip packaging and solve urgent needs like nurse staffing, business growth, and med delivery efficiency.

## NexPak Features

- Built-in versatility for multiple applications and new profit drivers (nursing homes, correctional facilities, retail, hospital)
- Models for Central Pharmacy filling for LTC homes, and In-Facility on-demand packaging
- Risk reduction, the safest, most convenient method to distribute medications
- A streamlined workflow for daily or 7-day/14-day processing
- Eliminate medication waste and cost with flexible production run scheduling

**Explore NexPak**, available in 300, 360, and 480 canister for low to high patient population size and adaptability for diverse care settings like LTC and correctional facilities, hospital and retail pharmacy.

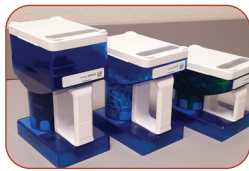

1 Smart Canisters, recognized in any slot



2 Multi-functional Universal Bulk Dispenser (UBD) for medications not in a devoted canister (unit dose, e-kit), and canister inventory\*



3 Customizable Thermal Printing including font styles, logos, barcodes



4 Mid To High Capacity: 300/360/480 canisters in locking drawers (up to 60 canisters per drawer)



5 Automated Tray Dispenser (ATD) prefill system for exception handling, with Intelligent Dispensing\*



6 Swappable Lower Packaging Unit with fast paper & ribbon replenishment

\* Central Pharmacy unit

## Main Specifications

Models	300, 360, or 480 canister models available for Central Pharmacy and In-Facility applications
Canister Capacity	230ml, 290ml, 350ml
Packaging Size	Multi-Dose 70mm x 75mm; Unit Dose 50mm x 55mm
Power Requirements	Standard 110v
Automated Tray Dispenser (ATD)*	60-cell tray accommodates whole and half pills that are not stored in canisters
Universal Bulk Dispenser (UBD)*	1 or 3 per unit for Central Pharmacy units (If 3, ATD will be 24-cell tray)
Lower Packaging Unit (LPU)	Accommodates Capsa-specific paper; Time to change paper & ribbon approx. 2 minutes; Optional 2 <sup>nd</sup> LPU recommended per site for optimizing performance. Optional dose check tray for In-Facility
Packaging Speed	Up to 60 PPM, based on average pouch contents dispensed by canister and MDU; Contents dispensed via the Universal Packager may differ
Operating Software	Client is Windows 10; Server is Windows Server 2019
Internal Temperature Monitoring	Yes

## Central Pharmacy Unit Specifications

## In-Facility Unit Specifications

Canisters	Dimensions	Weight	Canisters	Dimensions	Weight
300	35.5"w 42"d 80.5"h	1,235 lb	300	35.5"w 42"d 75"h	1,235 lb
360	35.5"w 42"d 80.5"h	1,300 lb	360	35.5"w 42"d 75"h	1,300 lb
480	46"w 42"d 84"h	1,390 lb	480	46"w 42"d 79"h	1,390 lb